QUICK RELEASE

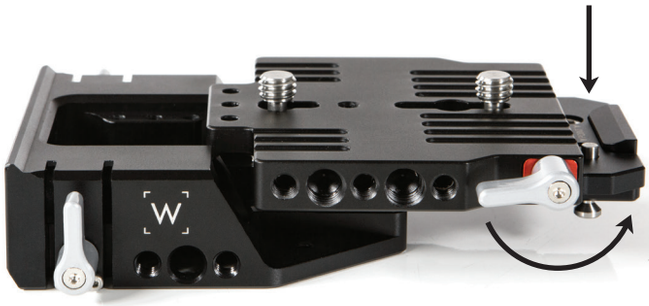

1. UNLOCK
Rotate thumbscrew to release.

2. PUSH/PULL PIN
Push down on pin or pull shaft below to disengage stopper.

3. SLIDE
Slide camera and plate toward rear. This action unplugs lens from mattebox.

4. REMOVE
Camera can be lifted directly up off Quick Dovetail.

PATENT PENDING

Quick release action unplugs lens from mattebox and allows camera to be removed from studio accessories.

Ideal for compact camera systems, run and gun style shooting, and quick setup and tear down of gear.

Quick Release plate utilizes ARRI standard dovetail shape. Allows easy attachment to 2060 Dovetails, Safety Dovetails, and all third party ARRI standard dovetails.

Wooden Camera LLC is not affiliated or associated with or endorsed or sponsored by ARRI Group, Blackmagic Design Pty, Ltd., Canon Inc., Ikonoskop AB, Panasonic Corporation, Red.com, Inc., Sony Corporation, or Vision Research Inc. Wooden Camera LLC has no right or claim to any ARRI Group, Blackmagic Design Pty, Ltd., Canon Inc., Ikonoskop AB, Panasonic Corporation, Red.com, Inc., Sony Corporation, or Vision Research Inc trademark. ©Wooden Camera, LLC 2011-2013